




# SHO100/ SHO100-T



**0FL-4201-001**

Out door humidity (temperature) sensor  
 Transmitter relativ fuktighet utomhus (med temperaturgivare)  
 Außen-(Temperatur)-Feuchtemessumformer  
 Sonde (de température) et hygrométrie extérieur  
 Transmisor de humedad (y temperatura) externa  
 Trasmettitore di umidità (e temperatura) per esterno

Instruction  
 Montageanvisning  
 Bedienungsanleitung  
 Instructions d'installation  
 Instrucciones de empleo  
 Istruzioni per installazioni

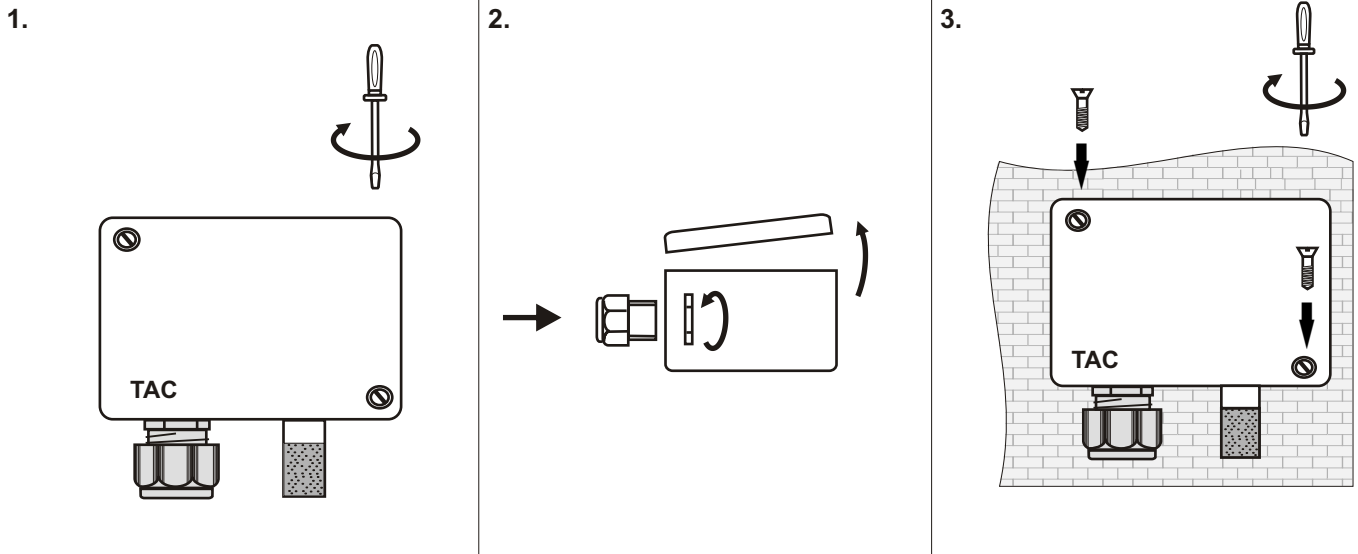

4. 4...20mA / 0...10V 0...100%r.H.

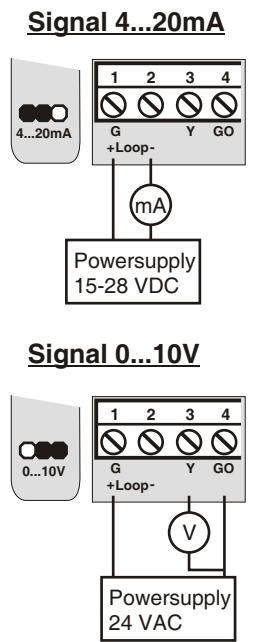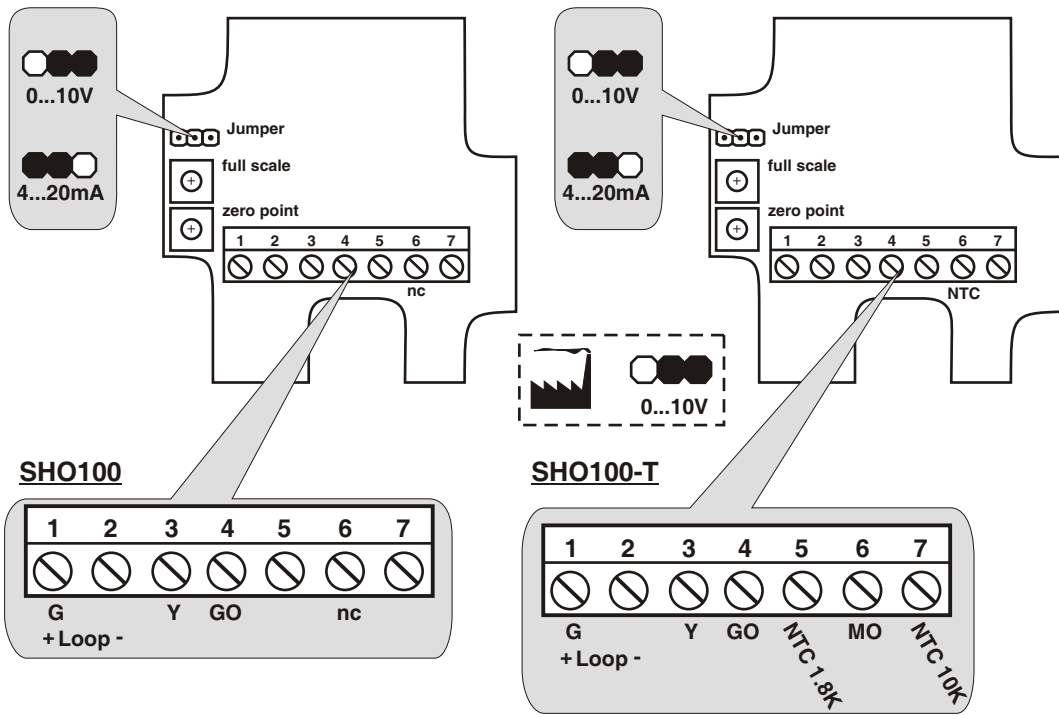

UG=15...36 VDC / 24 VAC ± 10%