




STC300

Pipe contact temperature transmitter
Anlignings temperaturtransmitter
Anlegetemperaturmeßumformer
Convertisseur de sonde d'applique
Transmisor de temperatura aplicada
Trasformatore temperatura a contatto


OFL-4188-001

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

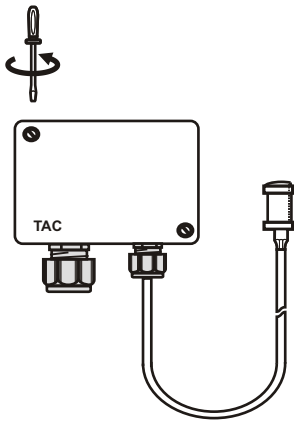


2.

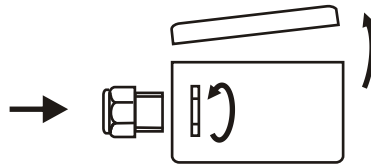

3.

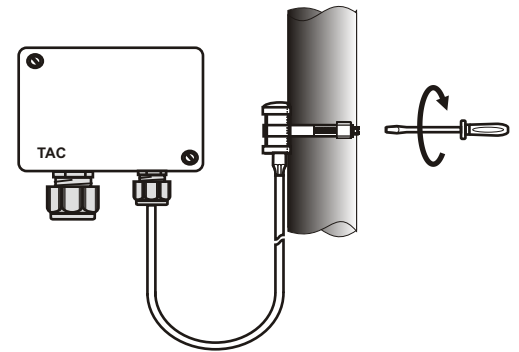

4. 4...20mA

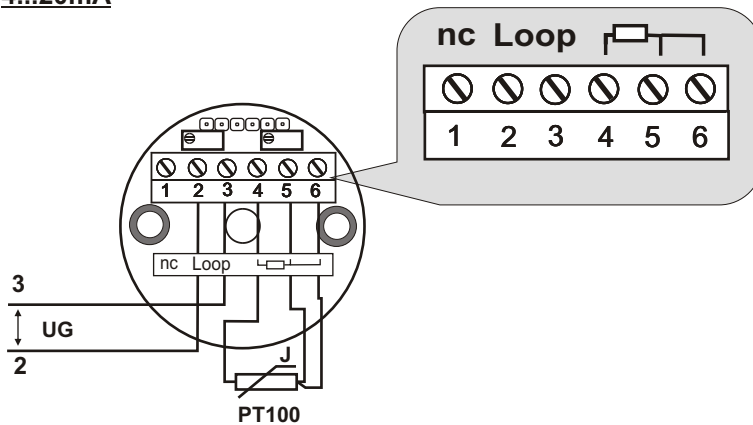

UG=15...36 V DC